



- Box Dimensions: 16.5" x 16.5" x 6"
- Illuminated Area: 15.5" x 15.5"
- 6 foot, 115VAC electric cord
- Bulb Included



Clear Geometric Shapes (shown)
Sold Separately (#914518)

Reorder#	Description	Unit
914514	Light Box	Each
914518	Clear Geometric Gel Shapes (Circle, Triangle, Square, Rectangle and Hexagon)	Each

Purpose

The light box features a 15.5" x 15.5" frosted light screen with a raised edge to prevent lighted objects from falling off. The illuminated surface can also be used to backlight translucent gel shapes that provide visual and tactile stimulation for children and adults. It also provides a surface for artists, photographers and children to illuminate drawings, transparent objects for the purpose of viewing or tracing. Numerous optional gel pads are available from Skil-Care Corporation that are designed to be used with the light box.

Easy to Use

The gel shapes can be placed on the box for viewing or for hand manipulation. If the activity is tracing, place the artwork directly on the box with an overlayment of white paper. Using the in-line power switch, toggle the switch to the "ON" position. Have the user trace the artwork to the greatest detail that they are capable of.



Caution

When using this or any electrical device, make certain that proper supervision is employed.



Fig. 1

First Use

When the light box is shipped the bulb is in its original packing and safely protected by foam and located in the lightbox itself. Remove the four screws (See Light Bulb Replacement), remove the foam and the bulb from its packaging and discard foam and light bulb packaging. Screw the light bulb into its base and fasten the backing of the light box with the four screws that were removed.

Light Bulb Replacement

This box is provided with an two (2) 13 watts medium base light bulb (60 watts equivalent). To replace the bulb, remove each of the four screws in the corners of the back of the light box (*Fig. 1, screws highlighted in yellow*).

Caution, light bulb might be hot, wait until light bulb cools before removing.

Gently unscrew (counter clockwise) the bulb and replace with a new bulbs by screwing it in the clockwise direction. Replace the back of the box and fasten the four corner screws.

Manufactured by: Skil-Care Corporation • Made in the U.S.A